

DisplayLink™ Requirements and Installation

System requirements

Windows XP SP2 or Windows Vista (32-bit)
1.2GHz CPU and 512MB memory*, USB 2.0
Microsoft .NET Framework Version 2.0 or higher (you can download this at www.microsoft.com/downloads if needed)
* 1.8GHz and 1GB memory recommended for full screen video playback.

Installing DisplayLink Manager software

When you plug the USB cable into the projector's DisplayLink connector and your computer for the first time, the DisplayLink Manager software installer starts automatically. Follow the instructions on the screen to install (if your computer warns you about running a program, you must allow the program to run). Once installed, the DisplayLink Manager icon is added to the Windows taskbar, and shortcuts to the software are added to the Start menu.

NOTE: You must have Administrator rights on the PC to install the software.

Using DisplayLink Manager software

Each time you start your computer with a projector connected, or connect a projector after your computer is running, your computer's desktop will be automatically displayed by the projector (if the projector is turned on).

Also, the DisplayLink Manager icon will appear in the taskbar (near the clock). Point to the icon to see projector status, or click the icon to access more features.

DisplayLink Manager software features

To access these features, click the DisplayLink Manager icon in the taskbar.

Display Mode

Blank Screen: Blanks the screen (same as pressing the blank button on remote).

Duplicated Desktop: The projector shows your computer's screen (default setting).

Extended Desktop: The projector acts as a separate display (in addition to your computer's screen). You can drag windows between the two displays, or even stretch windows across both displays.

Customize Display Mode lets you select advanced options.

Projection Resolution: Selects projected display resolution (extended desktop only).

Screen Rotation: Rotates the projected image.

Display Properties: Opens the Windows Display Control Panel.

Projector Controls

Turn On/Off: Powers the projector on and off.

DisplayLink Source: Makes it the active source.

Remote Control: Displays an on-screen remote that functions like the actual remote.

Show Menu: Access the projector menu using your keyboard and mouse (press escape to exit this mode).

Options

General: Set up automatic actions for DisplayLink Manager startup.

Sound: Specify where the sound plays (Sound tab only appears if your projector supports USB audio).